

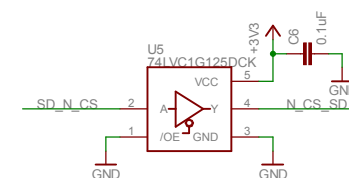
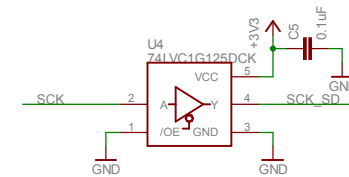
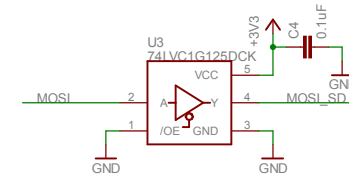
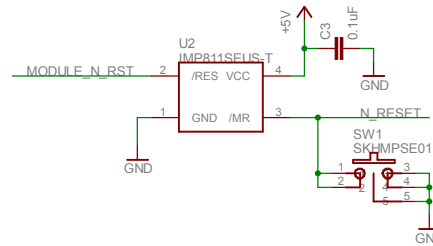


****PIN 2 IS 'IOREF' ON THE FIREWING****
FW24: CONNECTED TO 3V3 (PIN 4)
FW08: CONNECTED TO Vsupply (JUMPER TO 5V/3V3)
REMOVE/CUT PIN 2 SO 5V POWER IS FROM J5-5 ONLY

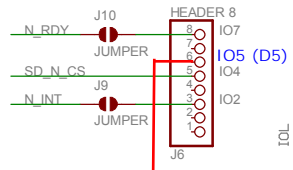



SCK_D13
 MISO_D12
 MOSI_D11

W550 IS 3V3 DEVICE (5V TOL IO)

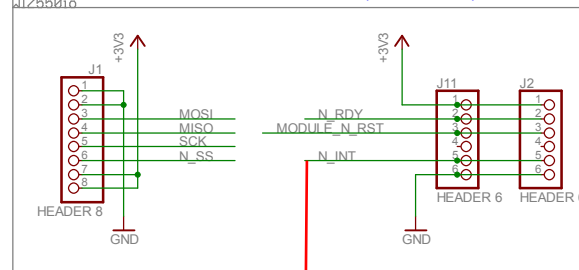

IO2 IS RB7_PG D ON FW08 (ICSP)
 BETTER CHOICE: DO NOT INSTALL J9
 CONNECT N_INT TO IO5 (D5_RC1)
 JUMPER J11-5 TO J6-6

REMOVE J5 HEADER
 JUMPER J5-1 TO J7-5 (MISO)
 JUMPER J5-3 TO J7-6 (SCK)
 JUMPER J5-4 TO J7-4 (MOSI)

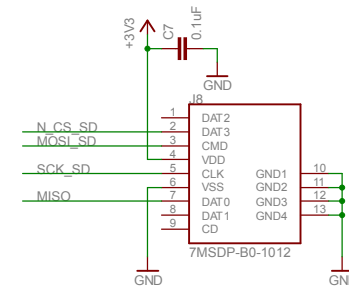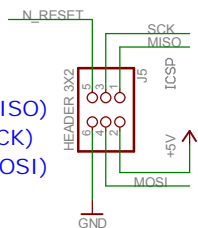

TITLE: ioShield-A

Document Number:

REV:
 1.1

Date: 2013-12-24 ?? 11:49:26

Sheet: 1/1